

TEOM K0 Verification Kits, Handling and Storage

Handling and storage procedures for the verification kits

Description: Proper handling and storage instructions for the verification kits with filters.

1. Always use the pre-filter included in the compilation package on the inlet and the calibration (red) filter tool when performing the K0 verification audit:




2. Keep the filters in the box, in their respective spot on the foam insert and the box inside the closed zip lock bag with the desiccant packet when not in use.

3. The humidity indicator should always remain in the bag with the filter box and desiccant. When all three spots have turned pink, the kit has expired:



4. There is a sticker located on the bottom of the box which has ten lines on it. The dates should be written in each time the kit is used and once the ten spots are filled, the kit has expired;

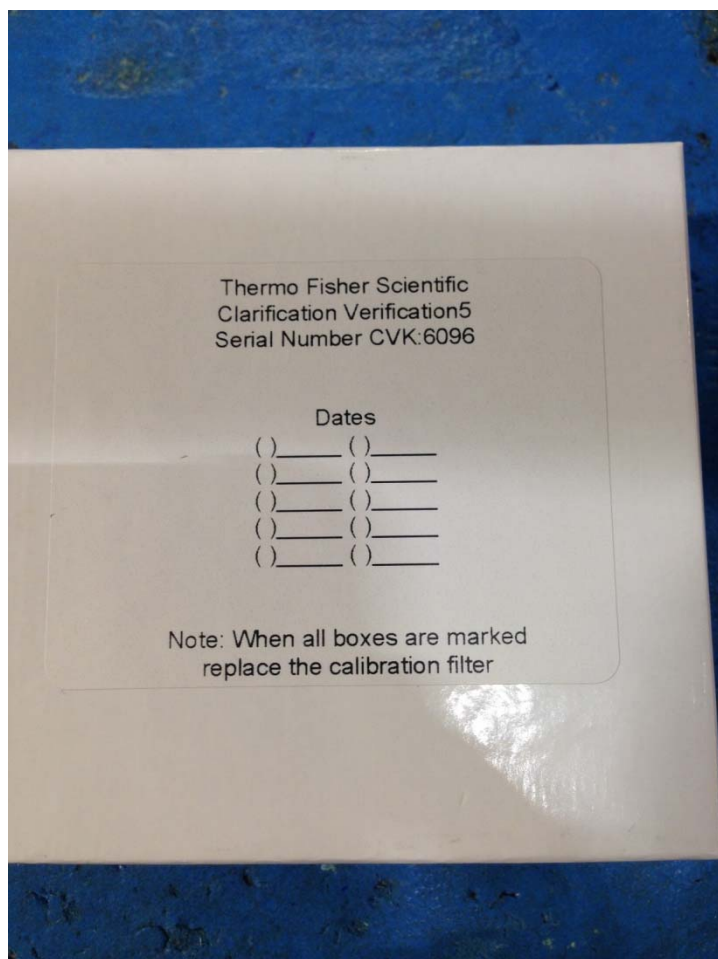

USA

27 Forge Parkway
Franklin, MA 02038
Ph: (508) 520-0430
Toll Free: (866) 282-0430
orders.aqi@thermofisher.com

Find out more at [thermofisher.com](https://www.thermofisher.com)

© 2016 Thermo Fisher Scientific Inc. All rights reserved. All trademarks are the property of Thermo Fisher Scientific and its subsidiaries unless otherwise specified.